


# Z605N Bale Chamber for Self-Propelled Baler

---

---

## *Parts Manual*

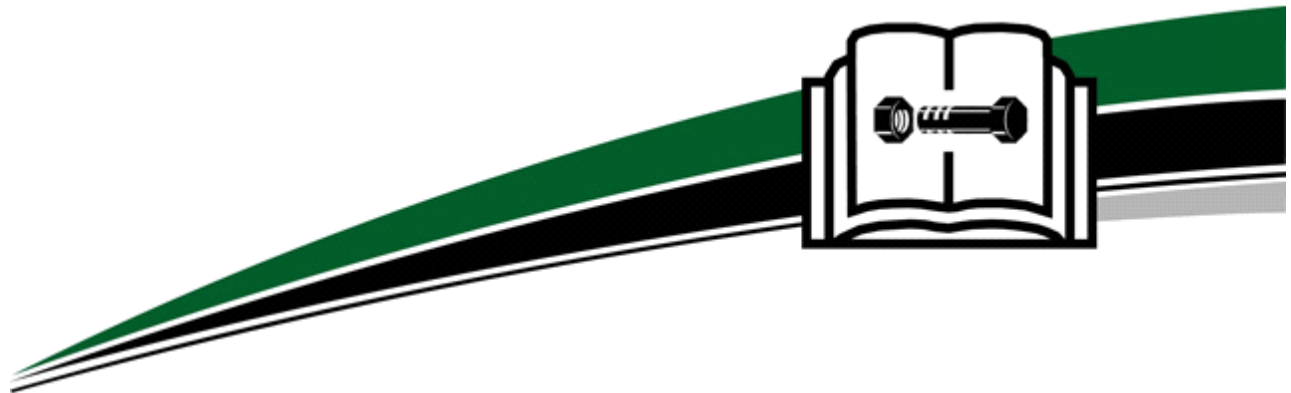

Publish Date Mon, 03 Aug 2020  
Serial No.  
Order No. 105400YWG



**Vermeer®**

EQUIPPED TO  
DO MORE.®



## HOW TO USE THE MANUAL

This manual contains illustrations and parts lists of components and assemblies which make up the machine. Each page consists of the name of the assembly or component, a figure number, reference numbers, part numbers, part names, and the quantities of the parts used.

Assembly or component name helps identify the illustration and parts list for each figure. This name also helps locate the general area of the machine where the assembly or component can be located.

Figure numbers are used to identify each assembly or component and to group these assemblies or components into major categories.

Reference numbers shown in a column refer to the numbered parts in the illustration. This ties the part in the illustration to the part number and description in the parts list.

Part numbers are used to identify individual parts or part assemblies.

Part descriptions provide the name of the part, plus additional information such as dimensional specifications and what parts are grouped together to form part assemblies, which helps you identify the part(s).

Quantities listed for each figure are only for that assembly or component and not the total used per machine.

This parts manual is not intended to be a complete guide for machine service or repairs. Contact your Vermeer dealer for any of your service or technical requirements.

## ORDERING PARTS

Parts for repair or replacement are available through our network of authorized dealers located throughout the world.

Use only authorized Vermeer parts for repair or replacement. Always give the serial number and

model number of the machine for which parts are being ordered. When ordering parts for component(s), which are not manufactured by Vermeer Corporation, also give the serial number of that component(s). Order all parts by part number, part name, and quantity needed.

## UPDATING AND REORDERING MANUALS

The parts lists, illustrations, and specifications in this manual are based on the latest information available at time of publication. Your machine may have product improvements and options not yet contained in this manual.

Vermeer Corporation reserves the right to make changes at any time without notice or obligation to you.

Your dealer will receive notice of these changes and can assist you with accurate parts identification when ordering.

A copy of this manual is supplied with each machine. Additional copies are available through your dealer. When ordering additional manuals, use the reorder number listed on the front cover and the quantity needed.

## NOTICE TO OWNER

Replacement manuals are free of charge by registering your **used** Vermeer machine. Your machine's Operator's, Maintenance and Parts Manuals may be available online at [www.myvermeer.com](http://www.myvermeer.com). For questions about online or printed manuals, or to register a used machine, contact the Customer Data Department by telephone: 800-829-0051 or 641-628-3141; email: [dataanalytics@vermeer.com](mailto:dataanalytics@vermeer.com); internet: [www.vermeer.com](http://www.vermeer.com) or [www.myvermeer.com](http://www.myvermeer.com); or, letter: Customer Data Dept., Vermeer Corporation, PO Box 200, Pella IA 50219 USA.



**Visual Table of Contents - Section 00**

Visual Table of Contents - Overview	00-00
Quick Reference - Section 1	00-01
Manuals and Decals - Section 2	00-02
Basic Baler Features - Section 3	00-03
Electrical - Section 4	00-04
Hydraulics - Section 5	00-05
Pickup - Section 6	00-06
Netwrap - Section 7	00-07
Powered Windguard - Section 8	00-08
Bale Ramp - Section 9	00-09

**Quick Reference - Section 01**

Roller Locations and Belt Routing	01-01
Vermeer Lubes, Etc.	01-02

**Manuals and Decals - Section 02**

Manual Case/Resource Library	02-01
Decals - Cosmetic/Controls	02-02
Decals - Controls, Continued	02-03
Decals- Safety	02-04

**Basic Baler Features - Section 03**

Front Frame	03-01
Scale	03-02
Tailgate	03-03
Belt Tightener/Idler Rollers/Belts	03-04
Breakdown - Idler Rollers	03-05
Starting/Drive Rollers	03-06
Auger - Crop Diverter	03-07
Auto Greaser	03-08
Drive Sprockets	03-09
Chains and Tighteners - LH Side	03-10
Shields	03-11
Moisture Sensing Kit	03-12

**Electrical - Section 04**

Controls	04-01
Harnesses	04-02

**Hydraulics - Section 05**

Density Circuit	05-01
-----------------	-------



## Table of Contents

## Z605N Bale Chamber for Self-Propelled Baler

Hoses - Density Circuit	05-02
Breakdown - Density Cylinder	05-03
Tailgate Circuit w/ Ramp	05-04
Hoses - Tailgate RH	05-05
Hoses - Tailgate LH	05-06
Breakdown - Tailgate Cylinder	05-07
Baler Motor	05-08
Hoses - Bulkhead to Motor	05-09
Hoses - Baler Disconnect	05-10
Breakdown - Baler Motor	05-11
Hoses - Non-Powered Windguard	05-12

### Pickup - Section 06

Pickup	06-01
Breakdown - Pickup Motor	06-02
Pickup End - RH	06-03
Pickup End - LH	06-04
Pickup Sprocket and Chain	06-05
Reel and Backplate	06-06
Breakdown - Pickup Reel	06-07
Lift Cylinders and Mounts	06-08
Pickup Lift Circuit	06-09
Breakdown - Pickup Cylinder	06-10
Non-Powered Windguard	06-11

### Netwrap - Section 07

NetWrap	07-01
Cross Members	07-02
Net Tension	07-03
Net Roll Brake	07-04
Bottom Net Guide	07-05


### Powered Windguard - Section 08

Powered Windguard	08-01
Breakdown - Windguard Motor	08-02
Rotor	08-03
Hydraulics	08-04

### Bale Ramp - Section 09

Bale Ramp	09-01
Breakdown - Ramp Cylinders (SN 101 - 106)	09-02

Visual Table of Contents

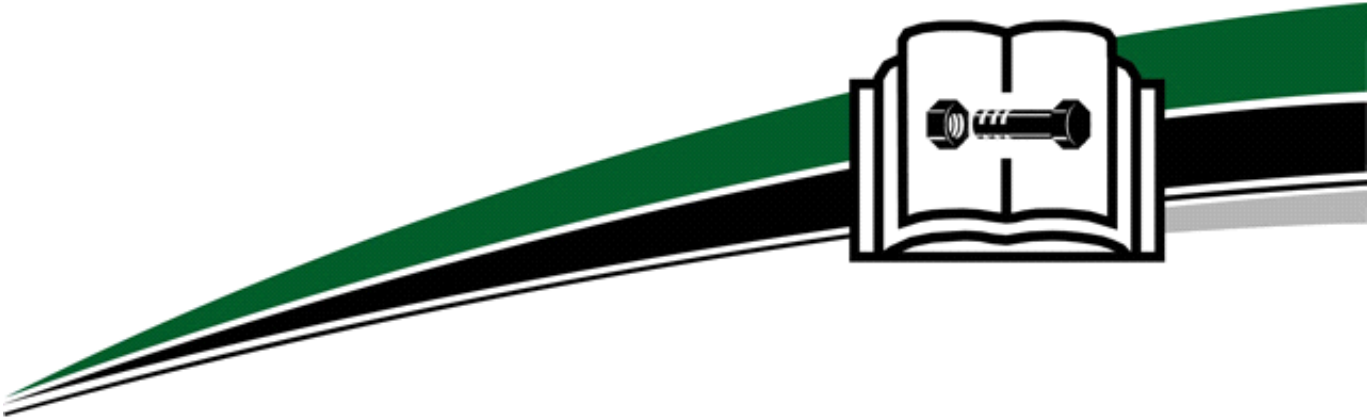



**Visual Table of Contents**

Visual Table of Contents - Overview	Fig 00-00
Quick Reference - Section 1	Fig 00-01
Manuals and Decals - Section 2	Fig 00-02
Basic Baler Features - Section 3	Fig 00-03
Electrical - Section 4	Fig 00-04
Hydraulics - Section 5	Fig 00-05
Pickup - Section 6	Fig 00-06
Netwrap - Section 7	Fig 00-07
Powered Windguard - Section 8	Fig 00-08
Bale Ramp - Section 9	Fig 00-09

Visual Table of Contents - Overview

Fig 00-00

Quick Reference

